



## 2. Maintenance Information


### Lubrication System

#### Engine Oil Capacity

##### ⚠ Caution

- Turn off engine, and park the motorcycle on flat surface with main stand.
- Check oil level with oil dipstick. (Do not screw the dipstick into engine when checking.)

If oil level is near lower limit, fill in the recommended engine oil to upper limit.

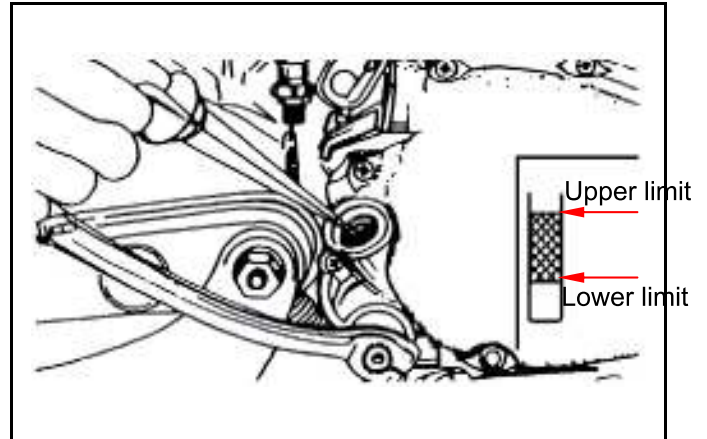

#### Engine Oil Replacement

Engine off and replace the oil dipstick.

Remove the oil drain bolt under the crankcase to drain the engine oil.

After completely drain the engine oil, clean the drain bolt and the washer. If the washer is deformed or cracked, replace with a new one.

Torque value : **3.5~4.5kgf-m**

##### ⚠ Caution

- Warm up the engine before drain oil, that will make engine oil easily drained thoroughly

Fill in the engine oil to the standard capacity.



Oil viscosity SAE 10W-30 Recommended using Bramax series engine oil.

#### Engine Oil Capacity

**Full disassembly : 1000 c.c.**

**Regular replacement : 800 c.c.**

Install the dipstick, run the engine for several minutes. Turn off the engine, and check oil level again. Check if engine oil leaks.

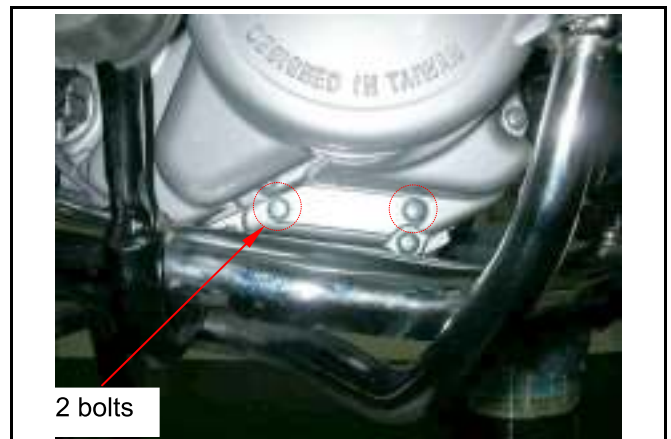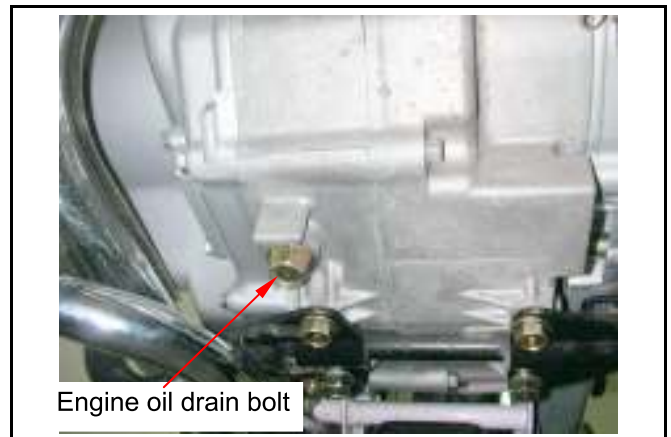

#### Engine Oil Strainer Cleaning

Drain engine oil completely.

Remove oil strainer.

Using high pressure air to clean oil strainer is suggested.

Check if oil strainer is deformed or damaged. Replace it if necessary.

Reinstall oil strainer and oil strainer cap.

Torque value : **0.8~1.2kgf-m**

